




# Invisible Reader™

Wiring Diagram and Installation Template  
(Proximity Reader)


November 2011

# Wiring Diagram

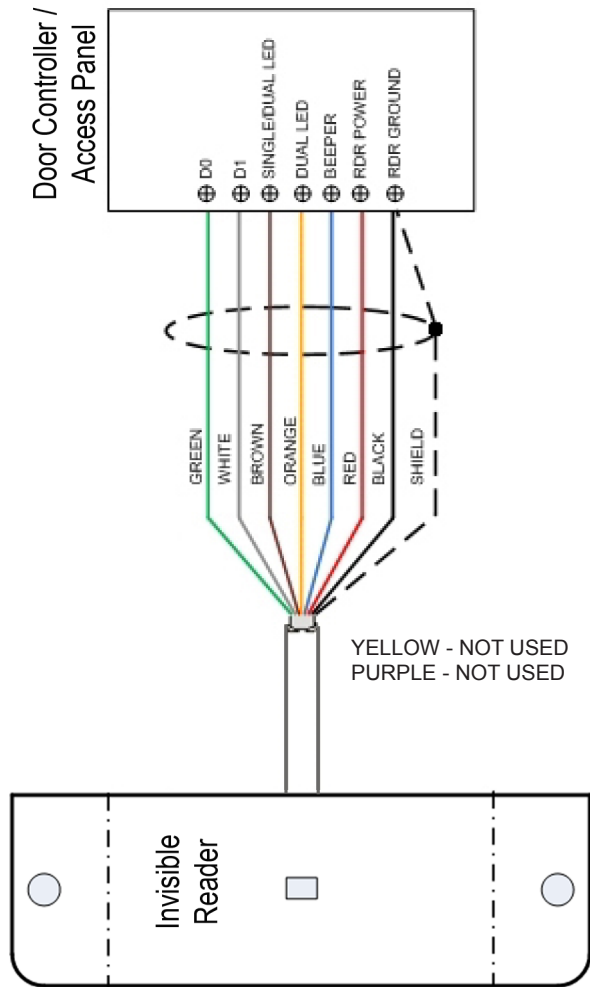

# Installation Template

(for all application)

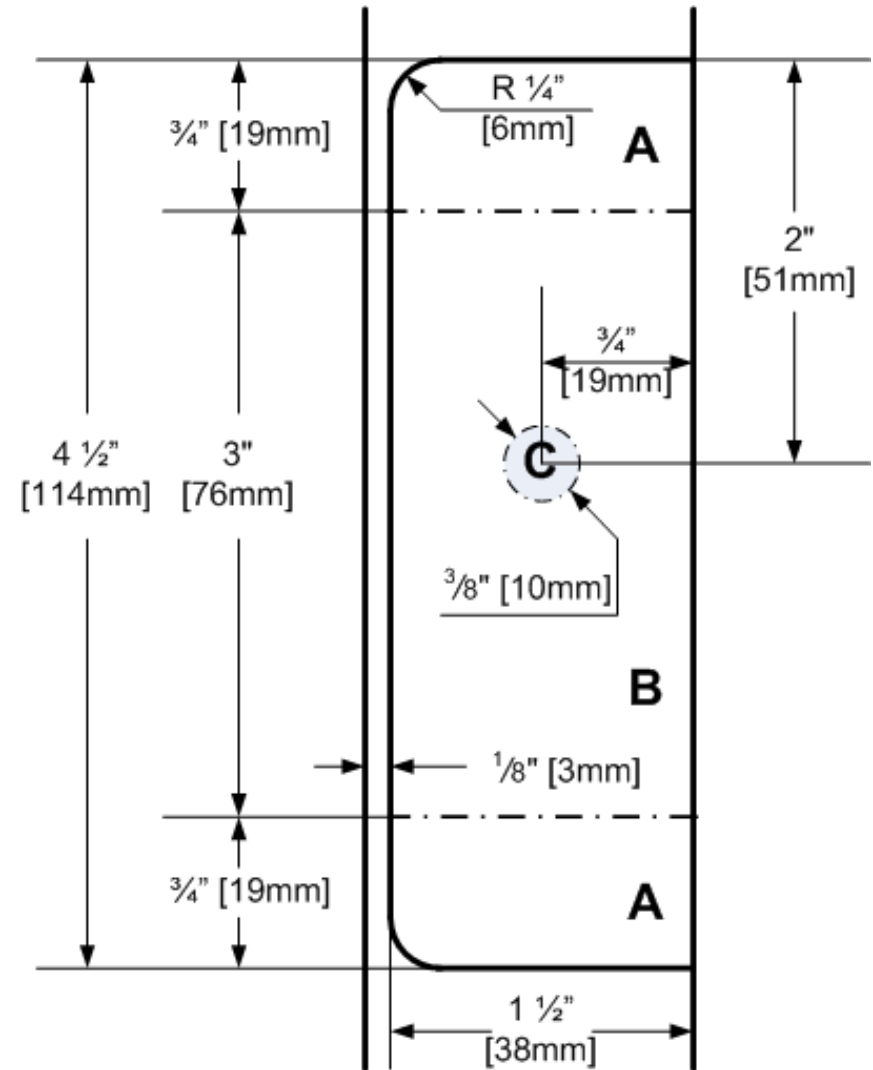

Cutout Depths required for wooded frame/door applications

- A** - Faceplate Tab area (Depth of  $\frac{1}{8}$ " [3mm])
- B** - Reader Module area (Minimum Depth of  $\frac{3}{4}$ " [19mm])
- C** - Cable Feed area (Requires a  $\frac{3}{8}$ " [10mm] diameter hole to provide access for the reader wiring harness)